

Quick Change Electrode Assembly

General Replacement Instructions


These instructions may vary depending on the equipment.

1 Follow standard procedures to disconnect water services to this assembly.


2 Loosen the welder's clamp.

3 Check the rear of the Barrel to verify that insulation is on the internal diameter and inserted to the bottom of the opening.

4 Insert the new Assembly onto the weld actuator rod by pushing it until it bottoms out.

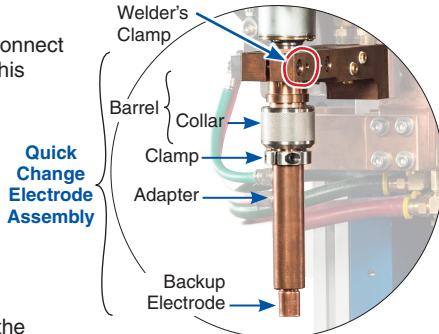

**Quick
Change
Electrode
Assembly**

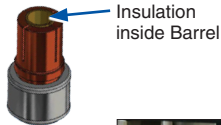

5 While the welder's clamp is loose, the Adapter assembly can be rotated to orient the water holes in the desired position.

6 Tighten the welder's clamp.

7 To install the Adapter & Clamp into the Barrel, rotate the Adapter until the Locating Pin seats inside the Notch in the Barrel. Then, hand tighten the Collar.

8 Re-establish the water services to the Adapter and check that all connections are tightened to recommended specifications.

